


Anziehvorschrift für Zylinderkopf	445.920	
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Ford
		Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



802.910
M 11 x 121



- | | | | |
|-------------|---|----|-------|
| Anziehen/ | * | 1. | 30 Nm |
| Tightening/ | ➤ | 2. | 90° |
| Serrage/ | ➤ | 3. | 90° |
| Apriete | | | |

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. 1,3 Ltr. OHV (HCS)
44 kW (60 PS)
Fiesta, Escort, Orion 8/1988 > 8/1995
BL 13H, BL 13CFI, BL 13EFI
Ka 6/1996 > 4/1999
BL 13EFI

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

445.920