




Hauptscheinwerfer



Die Reflektorhalterung durch Drehen lösen.
(Linke Seite: im Uhrzeigersinn drehen; Rechte Seite: gegen den Uhrzeigersinn drehen)




Reflektorhalterung herausnehmen: Mit der Hand auf die Reflektorhalterung drücken. Dann zum Lösen darauf drücken und schräg herausnehmen.

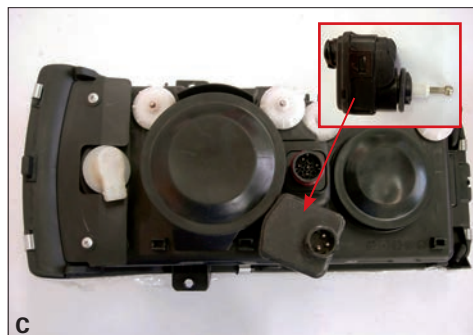

Den Stellmotor in der ursprünglichen Position einbauen.

Den Reflektor von Hand einhaken. (Verbindung von Halterung und Reflektor.)

Darauf achten, dass sich die Reflektorhalterung nach dem Einbauen nicht lockert. Den Stellmotor in seine Position drehen. (Linke Seite: gegen den Uhrzeigersinn drehen; Rechte Seite: im Uhrzeigersinn drehen)

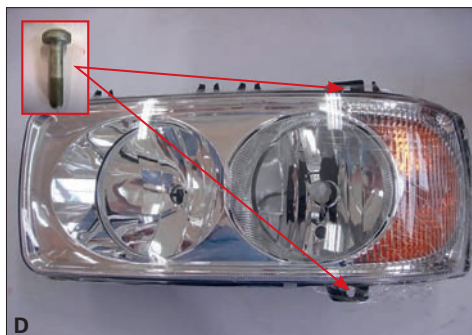


Nach Einbau der Lampe im Fahrzeug die Schraube festziehen (wie rechts dargestellt).






Headlight

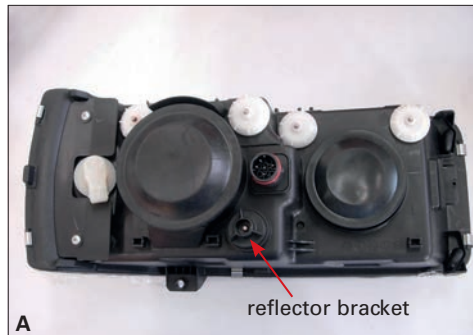

Rotate the reflector bracket to be loosened.
(L-side: rotates clockwise; R-side: rotates counterclockwise)




Take out the reflector bracket: Press the reflector bracket by hand. Then push it to loosen and remove at a slant.

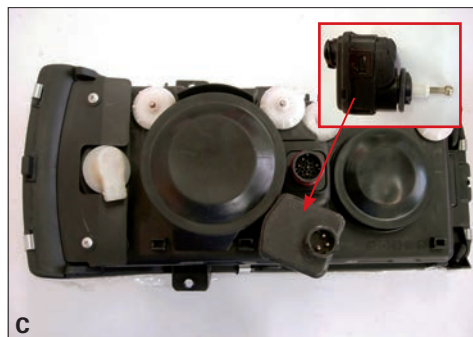

Install the servo motor in the original position. Please hook the reflector by hand. (Connect the bracket and reflector.)

Ensure that the bracket won't be loosened after installing. Rotate the servo motor into position. (L-side: rotates counterclockwise; R-side: rotates clockwise)

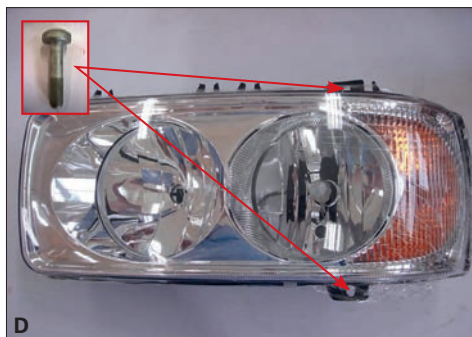

After assembling the lamp on the vehicle, lock the screw in the location (as shown on the right).

